



IC 9465
INFORMATION CIRCULAR/2003

Handbook for Dust Control in Mining

Department of Health and Human Services
Centers for Disease Control and Prevention
National Institute for Occupational Safety and Health



Information Circular 9465

Handbook for Dust Control in Mining

By Fred N. Kissell, Ph. D.

U.S. DEPARTMENT OF HEALTH AND HUMAN SERVICES
Public Health Service
Centers for Disease Control and Prevention
National Institute for Occupational Safety and Health
Pittsburgh Research Laboratory
Pittsburgh, PA

June 2003

ORDERING INFORMATION

Copies of National Institute for Occupational Safety and Health (NIOSH)
documents and information
about occupational safety and health are available from

NIOSH-Publications Dissemination
4676 Columbia Parkway
Cincinnati, OH 45226-1998

FAX: 513-533-8753
Telephone: 1-800-35-NIOSH
(1-800-553-4674)
E-mail: pubstaft@cdc.gov
Web site: www.cdc.gov/niosh

This document is in the public domain and may be freely copied or reprinted.

Disclaimer: Mention of any company or product does not constitute endorsement by NIOSH.

CONTENTS

	<i>Page</i>
About this handbook.....	1
Acknowledgments	1
Chapter 1.—Dust control methods in tunnels and underground mines	3
Chapter 2.—Continuous miner and roof bolter dust control	23
Chapter 3.—Longwall dust control	39
Chapter 4.—Dust control in stone mines.....	57
Chapter 5.—Surface mine dust control.....	73
Chapter 6.—Underground hard-rock dust control	83
Chapter 7.—Control of dust in hard-rock tunnels	97
Chapter 8.—How to find the major dust sources.....	109
Chapter 9.—Dust respirators in mines and tunnels	119
Index.....	129

ILLUSTRATIONS

1-1. Rollback of dust resulting from nonuniform airflow.....	5
1-2. A half-curtain raises the air velocity to confine the dust cloud	6
1-3. Falling material drags air with it, so air must be extracted at the high-pressure side of the transfer point.....	7
1-4. Spray-generated airflow carries dust back to the shearer operator	9
1-5. Water spray test that can lead to overrating spray effectiveness	10
1-6. Airborne capture performance of four types of spray nozzles.....	11
2-1. Machine-mounted scrubber design.....	24
2-2. Dust scrubber used with blowing ventilation	26
2-3. Excessive air blown toward the face will cause dust to bypass the scrubber inlets.....	27
2-4. Dust scrubber used with exhaust ventilation	28
2-5. Half-curtain location.....	31
2-6. Modified cutting cycle.....	32
2-7. Antirollback water spray system	33
3-1. Longwall dust sampling locations.....	40
3-2. Gob curtain forces air to stay on longwall face	44
3-3. Typical respirable dust concentration profile around the shearer during the tail-to-head pass.....	45
3-4. Air currents when using the shearer-clearer system	46
3-5. Support dust in the walkway dilutes as it moves downwind	48
3-6. Airflow at longwall headgate with a wing curtain.....	48
3-7. Transparent mesh partition retards the spread of shearer dust into the walkway	51
4-1. Conceptual approach to controlling crusher dust in a stone mine	60
4-2. Jet fan ventilating a single straight heading.....	63
4-3. Jet fan entrainment of mine air.....	64
4-4. Multiple headings a few crosscuts away from a fresh air pathway	66
4-5. Airflows obtained with jet fan in operation.....	67
4-6. Stopping built from damage-resistant brattice.....	69
5-1. Corner flaps added to a deck shroud to reduce leakage.....	75
5-2. A circular shroud that can be raised and lowered improves dust collection efficiency	76
6-1. Ore pass adjacent to steeply dipping ore body	84
6-2. Wetting the top surface of the bottom belt	87
6-3. Wetting both surfaces of the bottom belt.....	88
6-4. Dust-laden air exhausted from transfer point enclosure	89
6-5. Effect of duct inlet position, air velocity, and air curtain use on dust levels	92
7-1. Results from a dust concentration survey.....	98
7-2. Dust concentration measured near cutter head with TBM idle and operating.....	99
7-3. Auxiliary, or scavenger, system with adequate overlap	100
7-4. Auxiliary, or scavenger, system with no overlap	101

CONTENTS—Continued

7-5.	Loss of ventilation efficiency from mismatched airflow directions	101
7-6.	Zone of low air movement is created because ducts have similar air quantities moving in opposite directions	102
7-7.	TBM dust collection system.....	102
8-1.	Mist eliminator for direct-reading instruments that use light scattering.....	111
8-2.	Two gob-to-spillplate dust concentration gradients measured downwind of a longwall shearer	113
8-3.	Air in return diluted by line curtain leakage.....	114
8-4.	Cyclone shield for high-velocity air streams	115
9-1.	Half-mask replaceable-filter respirator.....	122
9-2.	Dust mask, also called a filtering facepiece	123
9-3.	Air helmet.....	124

TABLES

3-1.	Dust source contribution values from 13 longwalls	41
4-1.	Results of jet fan studies.....	64
4-2.	Cost and leakage of five types of stone mine stoppings.....	70
4-3.	Pressure drop in stone mine airways	70

UNIT OF MEASURE ABBREVIATIONS USED IN THIS REPORT

cfm	cubic foot per minute	m	meter
ft	foot	m ³	cubic meter
ft ²	square foot	mg	milligram
ft/min	foot per minute	mg/m ³	milligram per cubic meter
gpm	gallon per minute	mg/sec	milligram per second
hr	hour	min	minute
in	inch	mm	millimeter
in w.g.	inch water gauge	µm	micrometer
lb	pound	psi	pound (force) per square inch
L/min	liter per minute	sec	second

HANDBOOK FOR DUST CONTROL IN MINING

Fred N. Kissell, Ph.D.,¹ Editor

ABOUT THIS HANDBOOK

This handbook describes effective methods for the control of mineral dusts in mines and tunnels. It assumes the reader is familiar with mining. The first chapter deals solely with dust control methods, regardless of the application. It is a brief tutorial on mining dust control and will be of help to the reader whose dust control problem does not conveniently fit any of the mining equipment niches described in later chapters.

The subsequent chapters describe dust control methods for different kinds of mines and mining equipment. This includes underground coal and hard-rock mines, as well as surface mines, stone mines, and hard-rock tunnels. Because dust sampling has so many pitfalls, a chapter on methods used to sample dust is included. For those occasions when there is no practical engineering control, a chapter on respirators is also included.

Except for those listed as “future possibilities” in the longwall chapter, the dust control methods described are practical and cost-effective for most mine operators.

If controlling dust were a simple matter, dust problems in tunnels and mines would have been eradicated years ago. Unfortunately, most underground dust control methods yield only 25% to 50% reductions in respirable-sized dust. Often, 25% to 50% reductions are not enough to achieve compliance with dust standards. Thus, mine operators must use several methods simultaneously, usually without knowing for sure how well any individual method is working. In fact, given a 25% error in dust sampling and day-to-day variations in dust generation of 50% or more, certainty about which control methods are most effective can be wanting. Nevertheless, over the years, some consensus has emerged on the best dust control practices. This handbook summarizes those practices.

¹Research physical scientist, Pittsburgh Research Laboratory, National Institute for Occupational Safety and Health, Pittsburgh, PA.

ACKNOWLEDGMENTS

Parts of this handbook were previously published in the *Journal of the Mine Ventilation Society of South Africa* and *Tunnel Business Magazine*. Much credit is also due to Joe Schall, the Giles Writer-in-Residence at The Pennsylvania State University, who helped to transform the awkward prose of the authors into something more readable.

CHAPTER 6.—UNDERGROUND HARD-ROCK DUST CONTROL

By Fred N. Kissell, Ph.D.,⁵⁸ and Jozef S. Stachulak, Ph.D., P.Eng.⁵⁹

In This Chapter

- ✓ Ore pass dust control
- ✓ Drill dust control
- ✓ Blasting dust control
- ✓ Conveyor belt dust control
- ✓ Transfer point and crusher dust control
- ✓ Roadheader dust control

and

- ✓ How much ventilation air to use

This chapter discusses respirable dust control in underground hard-rock mines. These mines use a wide variety of extraction methods, but they have many common dust sources and dust control needs. Ore passes, drills, blasting, conveyor belts, transfer points, crushers, and load-haul-dump operations can be major sources of dust. Roadheaders, which are sometimes used in hard-rock mines, produce dust in large quantities. For the most part, dust in hard-rock mines is controlled with ventilation air, water sprays, and dust collectors. It is also important to prevent dust from getting into the air in the first place. Good dust control practices will reduce overall mine ventilation requirements.

Lack of maintenance is the main source of dust problems in hard-rock mines according to Rodgers [1974], who conducted a dust survey of hard-rock mines several decades ago. Rodgers found that spray systems had clogged sprays, dust enclosures had improperly fitted skirts, and ductwork was plugged and had leaks. Today's mines have better maintenance programs (we think), but when dust levels are high, maintenance is still the first topic to address.

The Mining Association of Canada [MAC 1980] and Knight [1980] provide good general information about hard-rock dust control. For conveyor belt dust control, Goldbeck and Marti [1996] and Swinderman et al. [1997] are valuable sources of information.

⁵⁸Research physical scientist, Pittsburgh Research Laboratory, National Institute for Occupational Safety and Health, Pittsburgh, PA.

⁵⁹Chief mines ventilation engineer, Inco Ltd., Copper Cliff, Ontario, Canada.

ORE PASS DUST CONTROL

Falling rock moves air. That's the ore pass dust problem in a nutshell.

Ore and waste passes (figure 6-1) produce large quantities of airborne respirable dust. The broken rock delivered to the passes contains a considerable amount of attached dust from preceding operations such as blasting and loading. The grinding action on the rock as it falls down the pass produces even more dust. However, the main problem is that the falling rock entrains air, producing a powerful “piston effect” that generates pressure surges of dusty air.

Good ore and waste pass design can help to relieve these pressure surges. For example, if the ore and waste passes are located near each other, connecting them on several levels will relieve the

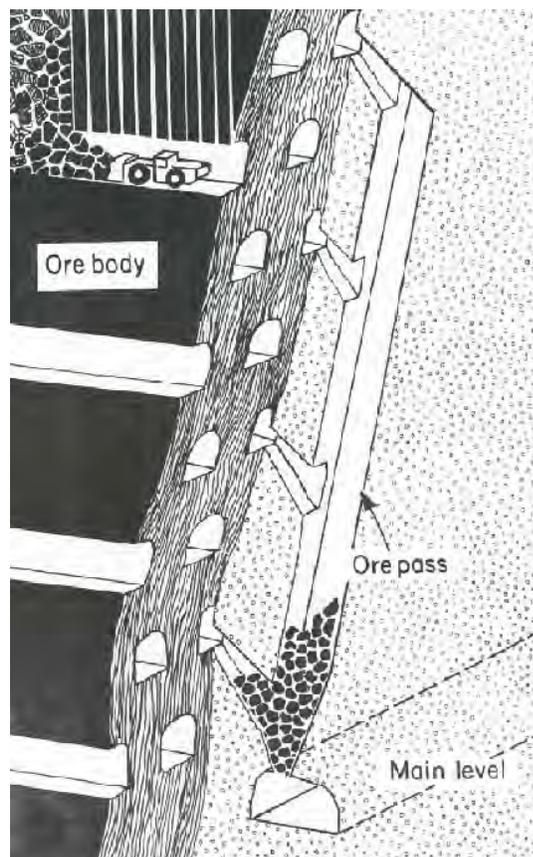


Figure 6-1.—Ore pass adjacent to steeply dipping ore body. (Courtesy of the Society for Mining, Metallurgy, and Exploration (SME) (www.smenet.org.)

pressure. Also, dusty air in the passes can be discharged into a return airway [Marshall 1964; Pullen 1974]. The Mining Association of Canada [MAC 1980] recommends exhausting sufficient air from the ore and waste pass system to indraft 200 ft/min air velocity at all leakages, assuming that one tipping location is open continuously. Discharging this air into a return airway eliminates the need to install a dust collector.⁶⁰

No matter what the ore and waste pass design, a critical step in dust control is to prevent its escape and dispersal into working areas by confining dust within the passes. This confinement can be accomplished by a system of stoppings and airtight doors over the ore and rock pass tipping locations. However, since some leakage from these doors is inevitable, another approach to dust control at tipping locations is to isolate them from travelways. This isolation is accomplished by locating the tipping locations in short, dead-end (stub) headings that have local exhaust dust collection systems.

Dust from ore and waste passes will be reduced if the rock is thoroughly wetted before delivery to the tipping site. More water can be added at the tipping site by spraying the rock as it falls into the pass. However, too much water at ore passes can be

⁶⁰Dust collectors located underground must be able to handle high-humidity air and possibly some condensation.

objectionable for many reasons. These include (1) an adverse impact on crushing and milling; (2) accumulation of a large quantity of water on top of the material in the chute, which creates a hazard for workers on the lower levels; and (3) plugging of chutes caused by water-softened clay minerals.

Ore pass dust control is addressed by ILO [1965], Geldenhuys [1959], Kneen [1959], Gray et al. [1961], and Foster [1965]. Ore pass design has been discussed by Hambley [1987]. An extreme case of ore pass pressurization caused by falling material has been discussed by McPherson and Pearson [1997].

DRILL DUST CONTROL

Good drill dust control requires good maintenance.

Drill dust is suppressed by water injected through the drill steel, which has been a common practice for many years [ILO 1965]. Usually, respirable dust is reduced by 95% or better [MSA Research Corp. 1974]. This does not, however, prevent dust from entering the air during the initial collaring period as the drill hole is started. Various means have been tried to prevent the escape of dust during collaring. These range from simple handheld sprays to elaborate types of suction traps around the end of the drill steel. None of these are very efficient.

Drills powered by compressed air are much less common than in the past, eliminating the dust problems associated with their use. For example, if some of the compressed air operating the drill leaks into the front head of the drill and escapes down the drill steel, it will cause dry drilling and carry dust out of the hole. Compressed air escaping through the front-head release ports will atomize some of the water in the front head. This atomized water evaporates quickly and, if the water is dirty, many dust particles will remain in the air [Sandys and Quilliam 1982].

MSA Research Corp. [1974] has listed the factors that can lead to high dust levels on drills. Many result from lack of proper maintenance. These are failure to use water, inadequate quantities of water, plugged water holes in the drill bit, dull drill bits, and dry collaring.

BLASTING DUST CONTROL

Water and ventilation are necessary, but the key to reducing dust exposure is blasting off-shift.

Water is important in controlling dust generated by blasting. The area surrounding the blast (walls, floor, and back) should be thoroughly sprayed beforehand. This precaution will prevent dust settled out during previous operations from becoming airborne. A uniform rock moisture content⁶¹ of only 1% greatly reduces dust compared to dry rock [Quilliam 1974]. However, since it is difficult to wet rock uniformly under realistic mining conditions, the optimum moisture content can be much higher.⁶² The water used for dust suppression, particularly in drilling and in blasting, should be as clean as possible, because the evaporation of dirty water can also release dust.

Sufficient ventilation is critical for the control of blasting dust since water alone is usually inadequate. Blasting dust and fumes should be diluted quickly and exhausted to the surface⁶³ via an untraveled return route. If this is not possible, the common practice is to arrange the blasting schedule so that the contaminated air will pass through working places when the miners are absent.

CONVEYOR BELT DUST CONTROL

A conveyor belt can generate large amounts of respirable dust from several sources. If the belt is not clean, dust is knocked from the belt as it passes over the idlers. Belt scraping and washing will reduce this dust source, and if the belt is dry, just wetting it can help. Also, much respirable dust originates at belt transfer points.

Belt cleaning by scraping and washing. Conveyor belts are usually equipped with belt scrapers; some have belt washers as well. Several manufacturers sell scrapers and washers; these play an important role in reducing the amount of dust generated by conveyor belt carryback. Carryback is that portion of the carried material that sticks to the belt instead of falling off at the head pulley. It becomes airborne dust as the belt dries and passes over the return idlers. When dust levels are high, the usual approach is to add a second or even third scraper rather than trying to get a single scraper to work better.

While multiple scrapers will reduce dust, they may be more efficient at spillage control than respirable dust control. Roberts et al. [1987] have shown that with each successive scraping, both the percentage of fines and the moisture level of the carryback substantially increase. This

⁶¹Weight of water in the rock divided by the weight of rock.

⁶²Quilliam [1974] recommends 5%, but this seems high to us.

⁶³Much of the dust will be deposited in the return airways. For example, Ford [1976] found that 45% of a 4- μ m particle size dust cloud was deposited within a distance of 600 ft. Bhaskar et al. [1988] measured 38% deposition of respirable dust at air velocities over 300 ft/min and 67% deposition at an air velocity of 165 ft/min. Stachulak et al. [1991] measured a 66% decrease in respirable dust in a 500-ft vertical return air raise.

shows that the larger material is preferentially removed by scraping and the smallest fines (which generate respirable dust) tend to stay stuck to the belt.

If multiple scrapers do not remove enough carryback to cut the respirable dust sufficiently, a water wash system may be necessary. These systems spray the belt with water in addition to scraping it. Stahura [1987] has written a comprehensive discussion of conveyor belt washing. Planner [1990] has reported on the average belt-cleaning efficiency of water sprays when used with primary and secondary scrapers. In the Planner study, water sprays placed between the primary and secondary scrapers reduced carryback from 11.1% to 3.4%. In another test, water sprays added to a secondary scraper reduced carryback from 13.9% to 1.1%.

Belt sprays also reduce airborne dust. Rodgers et al. [1978] added a 150-gpm water spray system to dry scrapers on a 54-in belt at a taconite processing plant. The sprays reduced respirable dust by 48% and total dust by 78% compared to dry scrapers alone. More recently, Baig et al. [1994] reported that airborne (respirable and float) coal dust levels were reduced 80%-90% when their belt scrapers were augmented with spray wash boxes.

Wetting of dry belts. Several studies have shown that wetting the bottom (return) belt can reduce dust from a dry belt. For example, Courtney [1983] measured the respirable dust reduction from a single 0.33-gpm spray onto the top surface (the noncarrying surface) of the bottom belt. The goal was to prevent dust from being knocked loose by the tail pulley and upper idlers. The spray was followed by a piece of ordinary floor carpet that wiped the belt to prevent channeling of the water. The spray and carpet were mounted close to the tail pulley so that the

belt was wet as it passed around the tail pulley and moved outby over the upper idlers (figure 6-2).

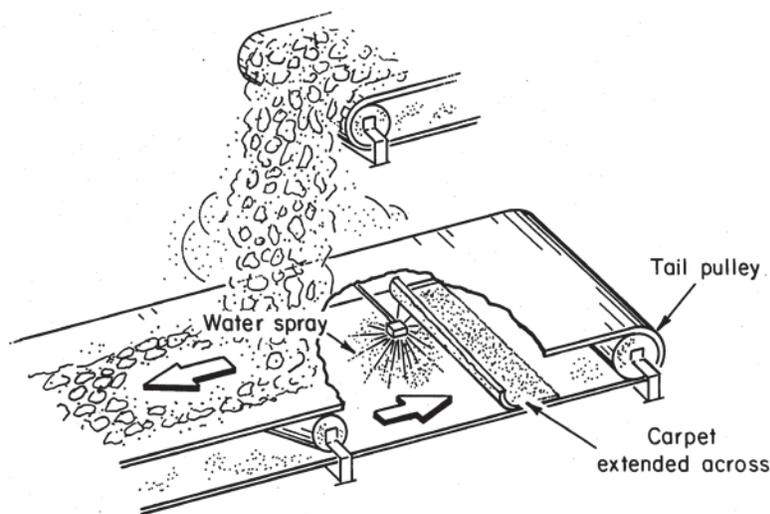


Figure 6-2.—Wetting the top surface of the bottom belt.

Respirable dust reduction from installation of the spray and carpet averaged 75%.

A 2-gpm spray without the carpet worked about as well. Slippage from excessive wetting was not a problem, as water usage was low (only 2 gpm) and the belt then traveled for 5,000 ft before passing over the drive at the head end.

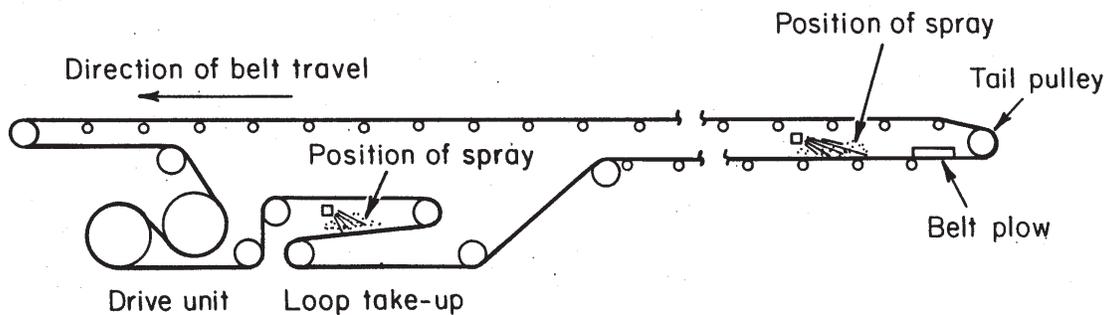


Figure 6-3.—Wetting both surfaces of the bottom belt.

A decade earlier than Courtney, Ford [1973] tested a system that wetted both surfaces of the bottom belt (figure 6-3). A spray in the loop take-up near the belt head wetted the carrying surface so that dust was not knocked loose by the ingoing trip over the lower idlers. Then, near the tail pulley, the noncarrying surface of the bottom belt was wetted by a second spray for the trip around the tail pulley and across the upper idlers, similar to the system described by Courtney. Sprays were mounted so as to wet the entire width of the belt, and they were controlled automatically to operate only when the belt ran. A belt plow was used in place of the carpet. Respirable dust was reduced by 67% with a total (all sprays) water flow of 0.53 gpm.⁶⁴

TRANSFER POINT AND CRUSHER DUST CONTROL

Transfer points. The traditional approach to transfer point dust control is to tightly enclose the transfer point, exhaust the dust-laden air from the enclosure through a duct, and either remove the dust from the air with a dust collector or discharge the dust to a return airway (figure 6-4).

Transfer point dust control can be difficult because the falling rock has a “piston effect” due to air entrainment. This air entrainment draws mine air in at the top of the transfer point enclosure, and it can push dusty air out of the bottom of the enclosure. The piston effect of the falling rock can be reduced by lowering the drop distance, by using “rock ladders” to break the fall of the rock, and by increasing the enclosure size so that entrained air can circulate back to the top of the enclosure. Tight enclosure of the transfer point requires adjustable skirtboard sealing systems, a means to prevent belt sag in the loading zone, and careful sealing of belt entry and exit locations, among others. The usual airflow guideline is to plan for 200 (or more⁶⁵) ft/min air velocity through all unavoidable openings.

⁶⁴Low-flow spray nozzles are prone to clogging because of their small orifice size. To avoid nozzle clogging while reducing water use, control timers have been developed to cycle belt sprays on and off (BWI Eagle, Inc.). Timers also allow better control over the degree of belt wetting.

⁶⁵MAC [1980] recommends adding 25% to the 200 ft/min as a safety factor. Yourt [1969] recommends that if a loaded belt is leaving the enclosure the air velocity be set at 200 ft/min plus the belt speed to counteract the drag effect. For instance, if the belt speed is 300 ft/min, then the air velocity into all unavoidable openings should be 500 ft/min. Rodgers [1974] gives a rule of thumb of 700-800 cfm of exhaust ventilation per foot of belt width.

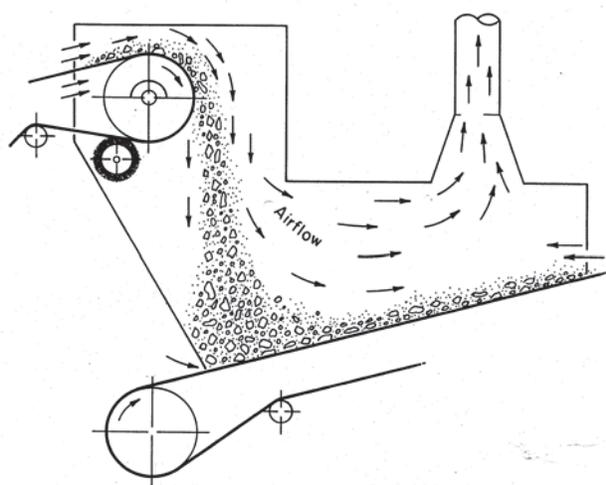


Figure 6-4.—Dust-laden air exhausted from transfer point enclosure.

for a velocity of at least 3,000-3,500 ft/min. ACGIH [2001] suggests a velocity of 3,500-4,000 ft/min. Cleanout ports should always be provided in horizontal ductwork.

Another way to reduce dust at transfer points is to provide an enclosed sliding chute to transfer the material. Sliding chutes and spouts are widely used in materials handling; much information on them is available [Page 1991; Mody and Jakhete 1987].

There is a wealth of information on how to reduce transfer point dust [MAC 1980; Goldbeck and Marti 1996; Swinderman et al. 1997; Mody and Jakhete 1987; Yourt 1969; ACGIH 2001; Organiscak et al. 1986].

Crushers. Crushers in mines range from small roll types used in coal mines to large cone types used in hard-rock mines and mills. Whatever the size and method of crushing, dust is controlled by water sprays and local exhaust ventilation from the crusher enclosure. The amount of water needed is hard to specify. It depends on the type of material crushed and the degree to which water will cause downstream handling problems. If the rock is dry, a starting point is to add a water quantity equivalent to 1% of the weight of the material being crushed [Quilliam 1974].

Crushers need lots of air and lots of water because they break lots of rock.

The amount of air required depends on how much the crusher can be enclosed. Enough air should be exhausted from a plenum under the crusher to produce a strong indraft at the jaw, grizzly, and any other openings around the crusher. The design guidelines for determining the required airflow are the same as those for transfer points. The unavoidable open area is

Duct takeoffs from transfer point (and crusher) enclosures must be designed to avoid picking up large particulate. The Mining Association of Canada [MAC 1980] recommends that the takeoff air duct be at least 6 ft from the falling rock to avoid picking up particles. Yourt [1969] suggests that the base of the takeoff cone be large enough so that the velocity of air exhausted is 500 ft/min or less.

In addition to proper design of takeoffs, the ductwork leading to the dust collector or return airway must be designed to prevent dust settling. Yourt [1969] suggests that risers be installed at a steep angle, not less than 58°, and that horizontal runs be sized

calculated and multiplied by a 200 ft/min indraft velocity.⁶⁶ The required airflow is usually large. For example, Rodgers et al. [1978] have described how dust from a 5-ft cone crusher was reduced by using a 75,000-cfm⁶⁷ exhaust ventilation system and a control booth for the operators.⁶⁸ Yourt [1969] has given a comprehensive set of design principles for dust control at crushing and screening operations. If there is an ore pass above the crusher, precautions should be taken to ensure that it is not pulled empty.

If the crusher can be located in a short, dead-end (stub) heading, then air can be drawn into the crusher in the usual way and then discharged from the heading through ductwork. This design approach creates an air movement into the stub heading that confines any dust that escapes the crusher.⁶⁹

MAC [1980], Walker [1961], Phimister [1963], and Ahuja [1979] have described dust control methods used for large crushers at underground locations. Foam is also used to control dust at crushers, particularly where water use must be limited. Use of foam is described in chapter 1 on dust control methods.

VENTILATION OF PRODUCTION AREAS

Production areas are ventilated by directing an air split from the main ventilating stream through the workings. Sandys and Quilliam [1982] have recommended that a minimum air velocity of 100 ft/min is needed to remove mineral dust in headings where track- and tire-mounted loaders are used for mucking ore. Dust generated by moving equipment can be reduced by applying water or chemicals (most commonly hygroscopic salts) to the roadways.⁷⁰

However, if enough air is supplied to meet the requirements of the diesel equipment in the heading, then the mineral dust is well controlled. The usual diesel airflow criterion has been to supply 100-125 cfm per horsepower of diesel equipment, all equipment being cumulative in any one split.

New MSHA regulations on diesel particulate, enacted in 2001, will require even more air in U.S. mines unless the particulate level can be reduced by other means.

⁶⁶Plus a 25% safety factor [MAC 1980]. See also footnote 8.

⁶⁷Large air quantities may be required because falling rock induces its own airflow. Pring [1940] investigated the amount of air required to produce an indraft in surge bins at crusher installations. About 35,000 cfm was required at a large crusher installation.

⁶⁸If large (80% or more) dust reductions are sought for workers near a crusher, the most practical way to achieve this is to provide an enclosed and pressurized control booth supplied with filtered air.

⁶⁹The benefits of locating a crusher in a stub heading are explained in more detail in chapter 4 on stone mines.

⁷⁰Reduction of roadway dust is discussed at greater length in chapter 5 on surface mines.

Stachulak [1989] has pointed out that, not long ago, 10,000 cfm⁷¹ was adequate for most development headings. However, some mines are now driving single drifts requiring 80,000 cfm to meet legal requirements for the diesel equipment.

In development headings, a blowing system kept to within 100 ft of the face will usually provide a satisfactory dust level. Exhaust systems can do a good job of removing dust when the end of the duct is held within 10 ft of the dust source. However, keeping a 10-ft distance can be difficult in development headings because of potential blast damage to the duct.

ROADHEADER DUST CONTROL

Roadheaders are occasionally used in hard-rock mines, but they are also used in many other underground excavations, from tunnels to wine storage caves. They have a reputation for generating dust for several reasons. Headings excavated by roadheaders are often larger in cross-section, and it can be hard to supply enough ventilation air to confine the dust cloud at the face. Some aspects of roadheader design also contribute to dust buildup. The cutting boom is narrow, so there is little of the dust cloud confinement provided by a wide boom. Also, the operator compartment is sometimes located far forward where the dust is inevitably higher. Finally, remote control of the machine, the best way to deal with dust, may not be available.

Dust control methods for machines like roadheaders usually depend on some degree of dust cloud confinement. In mines where methane is released along with the dust, confining the dust cloud will raise the methane concentration.

Below are the various methods used to control roadheader dust, assuming that the material being excavated generates no methane gas.⁷²

Ventilation-based controls. For a ventilation-based dust control, provide an adequate air volume using an exhaust duct with the duct inlet located close to the face. The volume should be sufficient to provide a forward air velocity in the heading of at least 60 ft/min based on the cross-sectional area of the empty heading. The duct inlet should be at least 10 ft forward of the operator and within 5 ft of the face.⁷³ Decreases in the air volume and increases in the duct inlet

⁷¹The usual guideline was 50 cfm per square foot of face area, equal to a velocity of 50 ft/min.

⁷²Lowering spray pressures will reduce the air turbulence. When air turbulence is reduced, methane concentration levels may rise. When a half-curtain is used at a gassy face, methane can build up behind the curtain. A good discussion of roadheader dust control, both with and without methane, is in Hole and Belle [1999].

⁷³These recommended air velocities and duct distances are target values based on average conditions, assuming that remote control is not used. If a mine is under more stringent standards because of silica in the dust, more air may be needed.

distance can have a big effect on dust levels (figure 6-5) [Ford and Hole 1984].

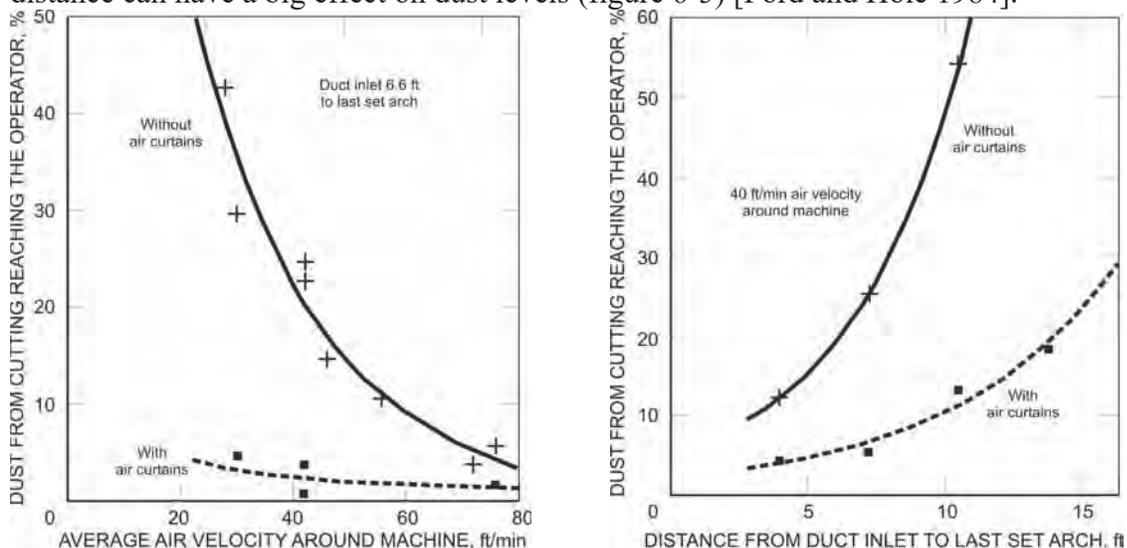


Figure 6-5.—Effect of duct inlet position, air velocity, and air curtain use on dust levels (from Ford and Hole [1984]).

The second step in ventilation-based dust control is to locate and use water sprays so as to minimize air turbulence at the face. High-pressure sprays or nozzles located to spray out into the open air will produce air turbulence. This turbulence will cause the dust cloud to expand and back up (rollback) against the ventilation air, covering the machine operator [Hole and Belle 1999]. To minimize turbulence, the water sprays on the boom should be located close to the cutting head to wet only the cutting head and the broken rock falling down from it. The water pressure (as measured at the spray nozzles) should be limited to 100 psi or less. If more water must be applied, larger orifice nozzles should be used. If the rock on the gathering pan must be wetted, only high-volume, low-pressure nozzles should be used. Finally, in headings where the cross-sectional area (not counting the machinery) is over 100 ft², a half-curtain should be considered in order to raise the air velocity for better dust confinement. Dust rollback and use of a half-curtain are explained more fully in chapter 1 on dust control methods.

Machine-based controls. Three machine-based controls are available to lower roadheader dust. First and most important is remote control. In conjunction with exhaust ventilation, remote control of the roadheader allows the machine operator to step back away from the dust cloud at the cutting face. In most cases, it is the most effective way to lower the operator's dust level.

The second control is to use a wet-head machine with low-pressure sprays. Several research studies have shown that wet heads will yield moderate dust reductions. The downside of wet heads is that the sprays can produce turbulence that causes the dust cloud to expand and roll back against the ventilation air, covering the machine operator with dusty air. For this reason, the nozzle pressure should be held below 50 psi. Hole and Belle [1999] report that a roadheader wet head operating at 20 psi and 6 gpm gave a 40% dust reduction compared to external sprays.

The third machine-based dust control is to use a Coanda air curtain to hold the dust cloud against the cutting face and away from the operator. Air curtains for dust control were devised in Germany and the United Kingdom. They are available as an option on some new machines. The greatest benefit is obtained when the ventilation quantity is low and the exhaust duct inlet cannot be held close enough to the cutting face. In underground testing, dust rolling back from the face was reduced by 80% when air curtains were used⁷⁴ (figure 6-5) [MRDE 1983; Hole and Belle 1999].

The best way to approach roadheader dust control will depend on individual circumstances. Providing sufficient airflow, keeping the exhaust duct inlet close to the cutting face, and using remote control will normally be sufficient to control dust. However, sufficient airflow and remote control are not always available. Keeping the duct inlet close to the face subjects it to damage by the cutter head. Therefore, if these conventional ventilation and remote-control remedies cannot be used, a half-curtain should be tried. Also, it might be possible to cut the face in two steps, first on the duct side, after which the duct is moved forward, and then the other side. Diligent replacement of worn picks can always help as well.

If all else fails, the operator of the roadheader should have a respirator or a fully enclosed cab that is equipped with an air filtration system. Cabs with filtration systems are discussed in chapter 5 on surface mines. Dust respirators are discussed in chapter 9.

REFERENCES

ACGIH [2001]. Industrial ventilation: a manual of recommended practice. 24th ed. Cincinnati, OH: American Conference of Governmental Industrial Hygienists.

Ahuja RC [1979]. Underground air filters solve dome dust problems. *Can Min J* Jul:54-57.

Baig NA, Dean AT, Skiver DW [1994]. Successful use of belt washers. In: Proceedings of the American Power Conference. Chicago, IL: Illinois Institute of Technology, pp. 976-978.

Bhaskar R, Ramani RV, Jankowski RA [1988]. Experimental studies on dust dispersion in mine airways. *Min Eng* Mar:191-195.

Courtney WG [1983]. Single spray reduces dust 90%. *Coal Min & Process* Jun:75-77.

Ford VHW [1973]. Bottom belt sprays as a method of dust control on conveyors. *Min Technol (U.K.)* 55(635):387-391.

Ford VHW [1976]. Investigations into the deposition of airborne respirable dust along underground airways. Mining Research and Development Establishment (MRDE) Report No. 65. National Coal Board, U.K.

⁷⁴The testing was done in a 16.5-ft by 12-ft arched section heading. Air curtains may not work as well in larger-sized headings.

Ford VHW, Hole BJ [1984]. Air curtains for reducing exposure of heading machine operators to dust in coal mines. *Ann Occup Hyg* 28(1):93-106.

Foster KJ [1965]. The ore pass: a return airway. *Can Min J* Oct:79-81.

Geldenhuis WH [1959]. Ore pass dust control. *J Mine Vent Soc S Afr* 12(Jan):pp. 22-23.

Goldbeck LJ, Marti AD [1996]. Dust control at conveyor transfer points: containment, suppression, and collection. *Bulk Solids Handling* 16(3):367-372.

Gray BJ, MacAulay CA, Yourt GR [1961]. Dust control at underground dumps, chutes, and crusher. *Can Min J* Oct:64-69.

Hambley D [1987]. Design of ore pass systems for underground mines. *CIM Bull* 80(897):25-30.

Hole BJ, Belle BK [1999]. Road header environment control (phase I, II, and III). Final report on project COL 603. CSIR Miningtek, Republic of South Africa. Available from Safety in Mines Research Advisory Committee (www.simrac.co.za).

ILO [1965]. Guide to the prevention and suppression of dust in mining, tunnelling, and quarrying. Geneva, Switzerland: World Health Organization, International Labour Office.

Kneen T [1959]. Dust control at dumps and passes. *Can Min J* Aug:93-98.

Knight G [1980]. Generation and control of mine airborne dust. CANMET report 80-27E. Ottawa, Ontario, Canada: Canada Centre for Mineral and Energy Technology.

MAC [1980]. Design guidelines for dust control at mine shafts and surface operations. 3rd ed. Ottawa, Ontario, Canada: Mining Association of Canada.

Marshall L [1964]. Dust control at ore and waste pass dumps. *Can Min J* Oct:84-86.

McPherson MJ, Pearson N [1997]. The airblast problem in the orepasses of the Grasberg mine, PT Freeport, Indonesia. In: Ramani RV, ed. *Proceedings of the Sixth International Mine Ventilation Congress* (Pittsburgh, PA, May 17-22, 1997), pp. 113-117.

Mody V, Jakhete R [1987]. Dust control handbook for minerals processing. Martin Marietta Corp. U.S. Bureau of Mines contract No. J0235005. NTIS No. PB88-159108.

MRDE [1983]. Application of air curtains and other methods for controlling ventilation and providing clean air at the workplace. Final report on ECSC research project 7256-12/030/08. National Coal Board, Mining Research and Development Establishment, U.K.

- MSA Research Corp. [1974]. Control of respirable dust in noncoal mines and ore processing mills – handbook. U.S. Bureau of Mines contract H0220030. NTIS No. PB 240 646.
- Organiscak JA, Jankowski RA, Kelly JS [1986]. Dust controls to improve quality of longwall intake air. Pittsburgh, PA: U.S. Department of the Interior, Bureau of Mines, IC 9114. NTIS No. PB87-167573.
- Page J [1991]. Examples of good and bad chute design. In: Proceedings of the Chute Design Conference. Bionic Research Institute, Republic of South Africa.
- Phimister G [1963]. Ventilation and dust control in an underground crushing-conveying system. *J Mine Vent Soc S Afr* 16(1):1-10.
- Planner JH [1990]. Water as a means of spillage control in coal handling facilities. In: Proceedings of the Coal Handling and Utilization Conference (Sydney, Australia). Barton, Australia: Institution of Engineers Australia, pp. 264-270.
- Pring RF [1940]. Dust control in large-scale ore concentrating operations. American Institute of Mining and Metallurgical Engineers, technical publication No. 1225.
- Pullen PF [1974]. Dust control at vertical ore and waste passes. *Can Min J* 95(9):30-31.
- Quilliam JH [1974]. Sources and methods of control of dust. In: The ventilation of south African gold mines. Yeoville, Republic of South Africa: The Mine Ventilation Society of South Africa.
- Roberts AW, Ooms M, Bennett D [1987]. Bulk solid conveyor belt interaction in relation to belt cleaning. *Bulk Solids Handling* 7(3):355-362.
- Rodgers SJ [1974]. Survey of past and present methods used to control respirable dust in non-coal mines and ore processing mills – final report. MSA Research Corp. U.S. Bureau of Mines contract No. H0220030. NTIS No. PB 240 662.
- Rodgers SJ, Rankin RL, Marshall MD [1978]. Improved dust control at chutes, dumps, transfer points, and crushers in noncoal mining operations. MSA Research Corp. U.S. Bureau of Mines contract No. H0230027. NTIS No. PB 297-422.
- Sandys MPJ, Quilliam JH [1982]. Sources and methods of dust control. In: Environmental engineering in south African mines. Yeoville, Republic of South Africa: The Mine Ventilation Society of South Africa.
- Proceedings of the Fourth U.S. Mine Ventilation Symposium (Berkeley, CA, June 5-7, 1989).
- Stachulak JS, Dainty ED, McPherson MJ [1991]. The phenomenon of dust deposition in exhaust ventilation shafts at INCO mines. *J Mine Vent Soc S Afr* 1991:183-195.

Stahura RP [1987]. Conveyor belt washing: is this the ultimate solution? TIZ-Fachberichte *111*(11):768-771. ISSN 0170-0146.

Swinderman RT, Goldbeck LJ, Stahura RP, Marti A [1997]. Foundations 2: the pyramid approach to dust control and spillage from belt conveyors. Neponset, IL: Martin Engineering.

Walker CT [1961]. The control of dust in an underground crushing station at the new Broken Hill Consolidated Ltd. mine, Australia. *J Mine Vent Soc S Afr* *14*(11):223-233.

Yourt GR [1969]. Design principles for dust control at mine crushing and screening operations. *Can Min J* *90*(10):65-70.